

ASSEMBLY INSTRUCTIONS FOR YOUR

Jonathan Adler MEURICE RECTANGULAR CHANDELIER

IMPORTANT SAFETY INSTRUCTIONS:

- *These instructions are provided for your safety. It is very important that they are read completely before beginning the installation of your fixture.
- *Turn off power at switch before replacing bulbs.
- *If any special control devices are used with this fixture, follow the instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.
- *WE STRONGLY RECOMMEND INSTALLATION BY A LICENSED ELECTRICIAN.


ASSEMBLY INSTRUCTIONS

SHUT OFF ELECTRICAL SUPPLY AT CIRCUIT BREAKER

1. Remove all parts carefully from the carton. Do not throw away any parts.
2. Remove mounting plate (A) from canopy (D) by removing canopy screws (E). Set canopy screws (E) aside.
3. Lift the mounting plate (A) to the ceiling outlet box. Once aligned, use a pencil to mark the locations of mounting holes (F) on the outside edges of the mounting plate.
4. Set the mounting plate aside and drill small holes at the marked locations. Holes should be sized so anchors (L) fit securely inside. Push the anchors into the holes.
5. Attach mounting plate (A) to ceiling outlet box using screws (B). Thread screws (M) through holes (F) and into wall anchors (A) to secure the mounting plate to the ceiling.
6. Measure desired drop for fixture to hang and add/remove extension tubes (J) as needed. Guide wiring through extension tubes before threading tubes together. **TO ADD/REMOVE EXTENSIONS: (Un)Thread the threaded nipple of one extension into/out of the threaded opening of the next extension. Make sure electrical cord is pulled tight when threading extensions together to prevent damage to the wiring.**
7. Thread the bottom extension tube (J) onto threaded tube (K).
8. Guide wiring from top extension (J) through quick link (H) and hang straight (G), exiting canopy (D). Lift canopy (D) to ceiling outlet box.
9. Make proper electrical connections described in steps 10-12.

A LICENSED ELECTRICIAN IS RECOMMENDED.

10. Attach ground wire from fixture (green or silver in color) to ground wire from outlet box. Fasten wires together with wire nut (C) and tightly wrap connection with electrical tape.
11. Attach hot wire from fixture (black in color or smooth side of wire) to hot wire from outlet box. Fasten wires together with wire nut (C) and wrap connection with electrical tape.
12. Attach neutral wire from fixture (white in color or ribbed side of wire) to neutral wire from outlet box. Fasten wires together with wire nut (C) and tightly wrap connection with electrical tape.
13. Carefully push wire connections back into ceiling outlet box.
14. Place canopy (D) over mounting plate (A). Thread canopy screws (E) into holes in canopy (D), and mounting plate (A) to secure fixture to ceiling.

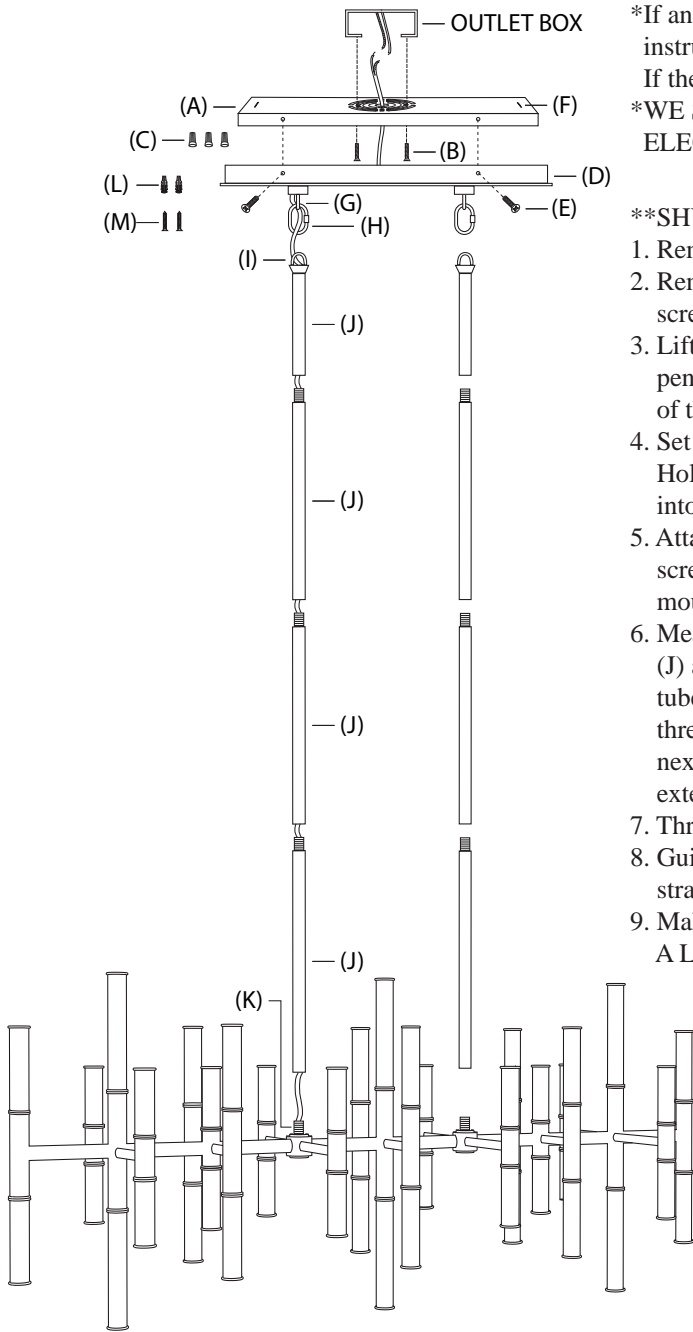

15. Install forty two 25W MAX. G16.5, Candelabra base bulbs into sockets.
16. Reconnect main electrical supply from the fuse box/circuit breaker and test the fixture.

To clean, use soft cloth only. Do not use any chemical or abrasive cleaners.